











## To adjust key tone:

1. Touch  and select PHONE SETUP menu > KEY TONE.
2. Use  or  to select key tone.
3. Touch  to confirm.



## 4. Making a call

1. Touch  and wait for a dial tone.
2. Enter desired phone number using numbers 0-9 on the keypad. Or, if preferred, enter the phone number first then touch . If you make an error, touch  to cancel.

 
## 5. Speakerphone

1. Touch  twice and wait for a dial tone.
2. Enter desired phone number using numbers 0-9 on the keypad. Or, if preferred, enter the phone number first then touch  twice. If you make an error, touch  to cancel.

## 6. Answering a call

1. Remove the handset from the base unit and touch . To end the call, touch  or place the handset back into the base unit.

Set to Auto Answer if you wish to answer a call by simply picking up the handset from the cradle.

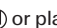 

2. When the Auto Answer is set to **ON**, remove the handset from the cradle. To end the call, touch  or place the handset back into the base unit.

## HANDSET HANDLING

Avoid touching the keypad area unnecessarily. With Smart Sensor technology the keypad will automatically disable while the receiver is against your ear. This feature reduces the risk of accidental keypad activation while speaking on the phone. When the keypad is disabled, the backlight is off. (Refer to user guide for more information.)

## STANDBY AND SLEEP MODES

When the handset has been inactive for awhile, it will enter sleep mode and the LCD backlight and key lights will switch off. Touch any key to return to standby mode. Refer to user guide for more information.

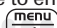Note: If keylock is ON, you will need to unlock phone to enter standby mode. To unlock keypad, touch  then immediately touch .

HELPLINE **SOS** 1-800-263-2244  
www.sanyo.ca

# SANYO

touch  
dect. 6.0

## Quick Start Guide

Digital Multi Handset  
Expandable Cordless Telephone  
with CID and Speakerphone

CLT-D6620, 6622 &  
6623 touch series



### IMPORTANT

Charge the handset battery pack 15+ hours before using your cordless handset for the first time

Refer to the User Manual supplied with your phone for further details on the operation of the SANYO touch Cordless phone.


## GETTING STARTED

### Step 1: Select the best location

For the best reception, place the base unit in a central location, away from other electrical devices.

### Step 2: Connect the base unit


1. Plug the AC adapter into a wall outlet as shown. Ensure that the outlet is not controlled by a wall switch.
2. Connect the AC adapter to the base unit. (A)

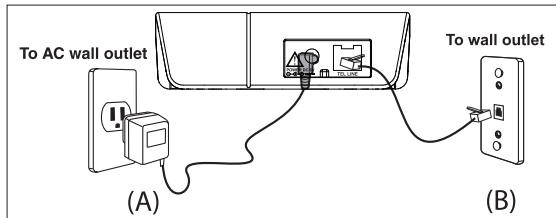

### Step 3: Activate and charge the handset battery pack


The removable battery pack is already installed in the handset.

1. Pull the battery contact tab out slowly and remove as shown.
2. Place the handset in the cradle of the base unit.

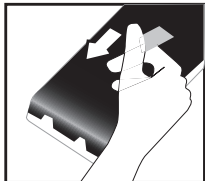

3. The battery icon on the display will flash to indicate the handset is charging.




4. Charge battery pack for at least 15 hours prior to first use.
5. When the battery is fully charged, the battery icon will stop flashing and  will appear.

### Step 4: Connect phone line

1. Plug one end of the modular phone cord (provided) into the telephone wall jack.
2. Plug the other end of the cord into the back of the base unit. (B)

#### FOR MULTIPLE HANDSETS ONLY

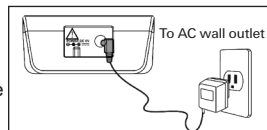

3. Connecting the charger  
Plug the AC adapter into the POWER DC 6V jack on the back of the charger. Plug the other end into a standard 120V AC wall outlet.






### Step 5: Handset Setup

#### 1 REMOVE protective film from display.





#### 2 Select the language: English, French or other


1. Touch the  key.
2. Touch the  key again to select the Language submenu.

3. Use  or  to select desired language.
4. Touch  to confirm.





### 3 Adjust Ring and Key Tone

To adjust ring volume:

1. Touch  and select RING SETTING menu > RING VOLUME.
2. Select External or Intercom Call.
3. Use  or  to select volume level, or select 'OFF' to silence the ring tone (not recommended).
4. Touch  to confirm.

**NOTE**  will appear to indicate external ring tone is silenced if 'OFF' is selected.

#### To adjust ring tone:

1. Touch  and select RING SETTING menu > RING TONE.
2. Select External or Intercom call.
3. Use  or  to select ring tone.
4. Touch  to confirm.