


SANYO

Dual Camera
VPC-FH1EX
VPC-FH1
VPC-FH1GX

Xacti QUICK GUIDE

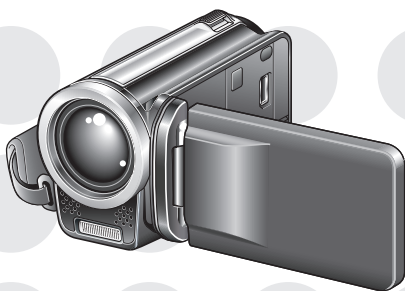

STEP 1 RECORD A VIDEO CLIP


- 1 Turn on the camera.
 - Press the ON/OFF button for at least 1 second.
 - If the screen to set the date and time appears, press the MENU button 2 times to cancel it.
- 2 Press the [RECORD] button to begin recording a video clip.
 - To stop recording, press the [RECORD] button again.

If the image is not captured...

Is there enough power left in the battery? Recharge the battery pack.

(See "Charge the battery pack" on the reverse side.)


STEP 2 CAPTURE A STILL IMAGE

- 1 Turn on the camera.
 - 2 Press the [CAMERA] button.
- 


You can capture a still image while recording a video clip.

- 1 Press the [RECORD] button to begin recording.
- 2 To capture a single shot while recording, press the [CAMERA] button.
 - The scene at the time the [CAMERA] button was pressed is captured as a still image.

STEP 3 VIEWING IMAGES

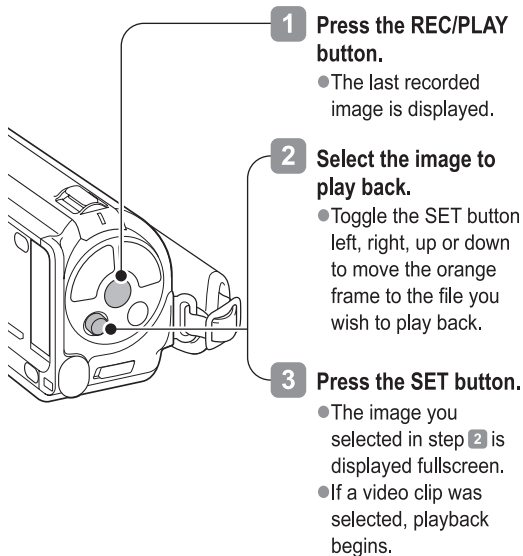

STEP 4 DELETING IMAGES

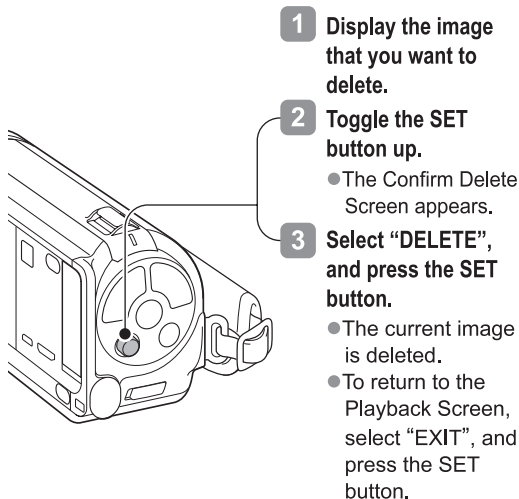


Did your photos turn out the way you hoped? Even if you make a mistake, it's easy to delete the pictures you aren't satisfied with. Unlike film cameras, with a dual camera you can take all the photos you want, keep the ones you like and delete the rest.

INSTALL THE BATTERY PACK AND CARD

Insert the battery pack

After installing the battery pack, connect the AC adaptor (supplied) to the camera's DC IN terminal and charge the battery.

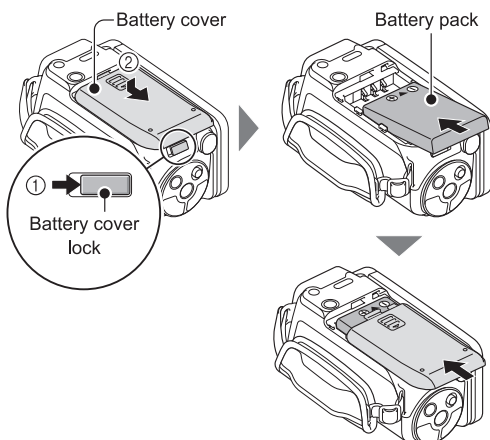

Insert the card

- An SD Memory Card is not included with your camera. Please purchase a commercially sold card.
- In this manual, the SD Memory Card is referred to as the "card".

